

Password Master List

Doc. Number: 71-0498
Revision: C
Released: 9/16/22

NOTE: Not all passwords will be set for all Modes.

Instrument	Calibration Mode	User Mode	Maintenance Mode	Gas Select Mode	Maintenance Mode 2	Factory Mode	Setup Programs (PC)
03 Series	-----	-----	0300	-----	-----	1994	2 programs
							User: 1994 Factory: 1994
04 Series	(included in User Mode)	1 beep: 0405 (default off)	2 beeps: 0400	3 beeps: 2014	-----	3 beeps: 1994	1 program
							User: 1939 Factory: riken1994
Eagle	-----	-----	-----	-----	-----	1994	-----
Eagle 2	1196	1196	-----	-----	-----	1994	2 programs
						EA Units: 1007	User: ----- Factory: 1994
GP-1000/NC-1000	-----	-----	0001	-----	-----	1994	-----
GW-3	(included in User Mode)	1 beep: 0405 (default off)	2 beeps: 3000	3 beeps: 2014	-----	3 beeps: 1994	1 program
							User: 1939 Factory: riken1994
GX-3R	(included in User Mode)	1 beep: 0405 (default off)	2 beeps: 8102	3 beeps: 2014	-----	3 beeps: 1994	1 program
							User: 1939 Factory: riken1994
GX-3R Pro	(included in User Mode)	1 beep: 0405 (default off)	2 beeps: 8102	3 beeps: 2014	-----	3 beeps: 1994	1 program
							User: 1939 Factory: riken1994
GX-2009	-----	9002	-----	-----	-----	1994	2 programs
							User: 1994 Factory: 1994
GX-2012	0405	2102 / 0405	2102 *backdoor password	-----	-----	1994	1 program
							Factory: 1994
GX-6000	0405 *backdoor password	0405 *backdoor password	0006	-----	2014	1994	2 programs
							User: 1994 Factory: 1994
GX-8000	-----	0405	0008	-----	-----	1994	2 programs
							User: 1994 Factory: 1994
RX-8000	-----	0405	0008	-----	-----	1994	2 programs
							CH4 Config: 1994
SC-8000	-----	0405	0008	-----	-----	1994	1 program
							User: 1994
SP-220	-----	-----	0220	-----	-----	1994	-----

	GX-3R Parameter User Edit	GX-3R Parameter Maint. Edit	SDM Parameter Edit
SDM-3R PC program	Right click Edit: 0405	Right click Edit: 1939	Right click Open SDM: 8102

RK Link App - Changing GX-3R Parameters	
Brand new Pro, inst. User Mode password never turned on	0000
Inst. User Mode password turned on	Inst. User Mode password
Inst. User Mode password turned off after being turned on	Inst. old User Mode password