

35-3010RK-02 Sample Draw Detector Head For Use With A Generic Device

Overview

This manual describes the 35-3010RK-02 sample draw detector head. This manual also describes how to install, start up, maintain, and calibrate the detector head when it is used with a gas monitoring controller. A parts list at the end of this manual lists replacement parts and accessories for the detector head.

Specifications

Table 1 lists specifications for the 35-3010RK-02.

Table 1: Specifications

Target Gases & Detection Ranges	Combustible Gas, 0 - 100% LEL Oxygen, 0-25% volume Hydrogen Sulfide, 0 - 100 ppm
Input Power	24 VDC
Current Draw	200 mA
Construction (housing)	Fiberglass/polyester (NEMA 4X)
Dimensions	15.44 in. H x 12.55 in. W x 8.31 in. D
Weight	14 lbs.
Sampling Method	Sample draw
Sample Flow	1.2 SCFH (nominal)
Response Time	90% in 30 seconds
Accuracy	±5% of detection range
Repeatability	±2% of detection range

Description

This section describes the components of the 35-3010RK-02 sample draw detector head. The sample draw detector consists of the housing, flow system, and detection system.

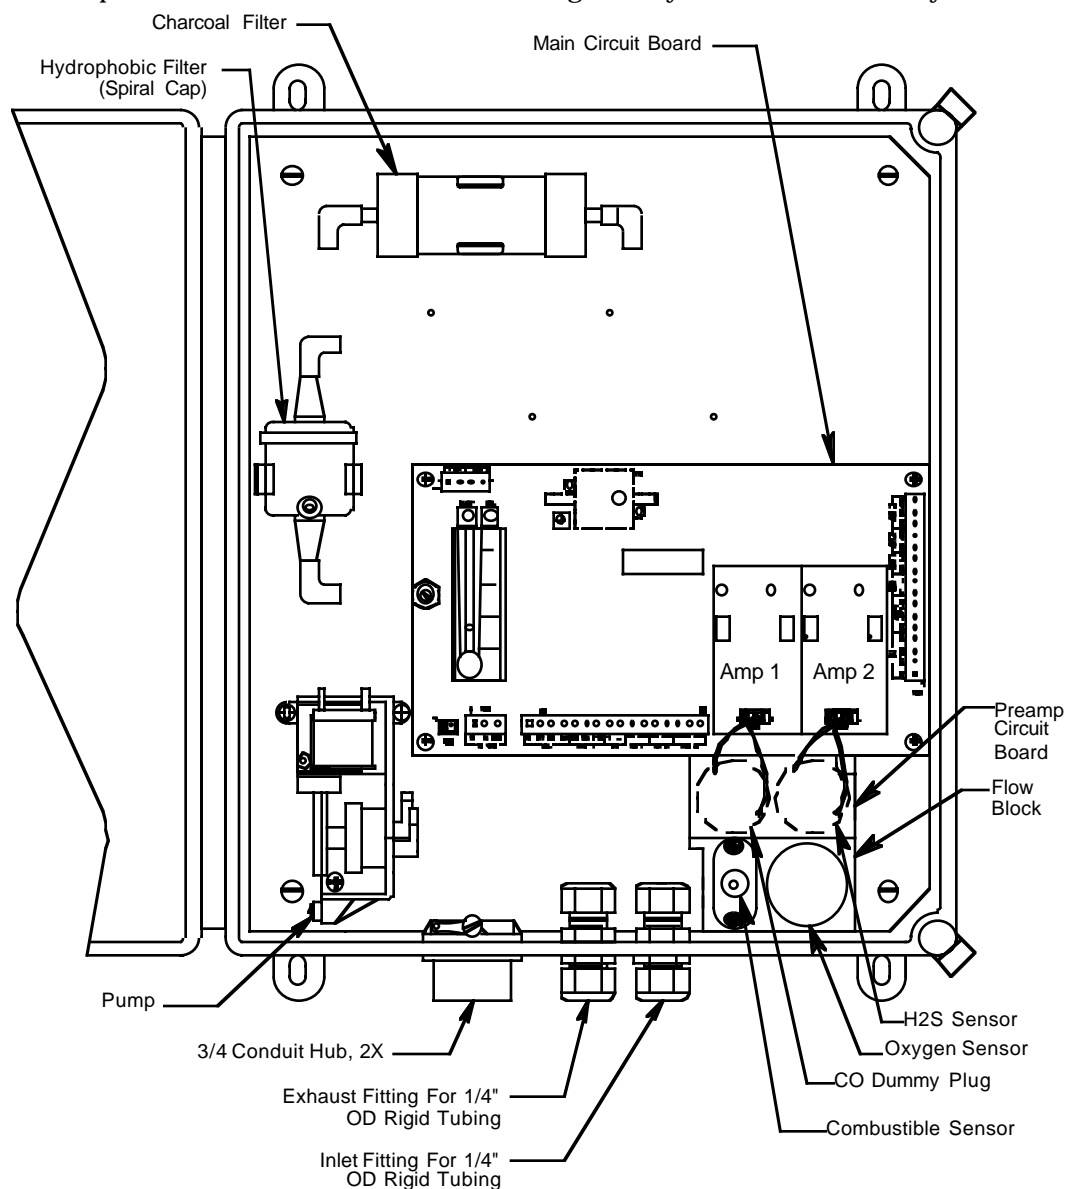


Figure 1: Sample draw Detector Head Component Location

Housing

The sample draw detector's fiberglass housing is weather- and corrosion-resistant. It is suitable for installation where general purpose equipment is in use. The housing door is hinged on the left side and is secured by two latches on the right side.

Four mounting feet are attached to the back of the housing (one at each corner). Use the mounting feet to install the housing to a vertical surface. Use the two conduit hubs on the bottom of the housing to make wiring connections.

An aluminum subpanel is mounted to the interior of the housing. The sample draw detector's internal components are mounted to the subpanel.

Flow System

The sample draw detector's flow system consists of the INLET fitting, hydrophobic filter, charcoal filter, pump, flowmeter, bypass valve, status lights, pressure switch, flow block, and EXHAUST fitting (see Figure 1). Figure 2 illustrates how the gas sample moves through the flow system.

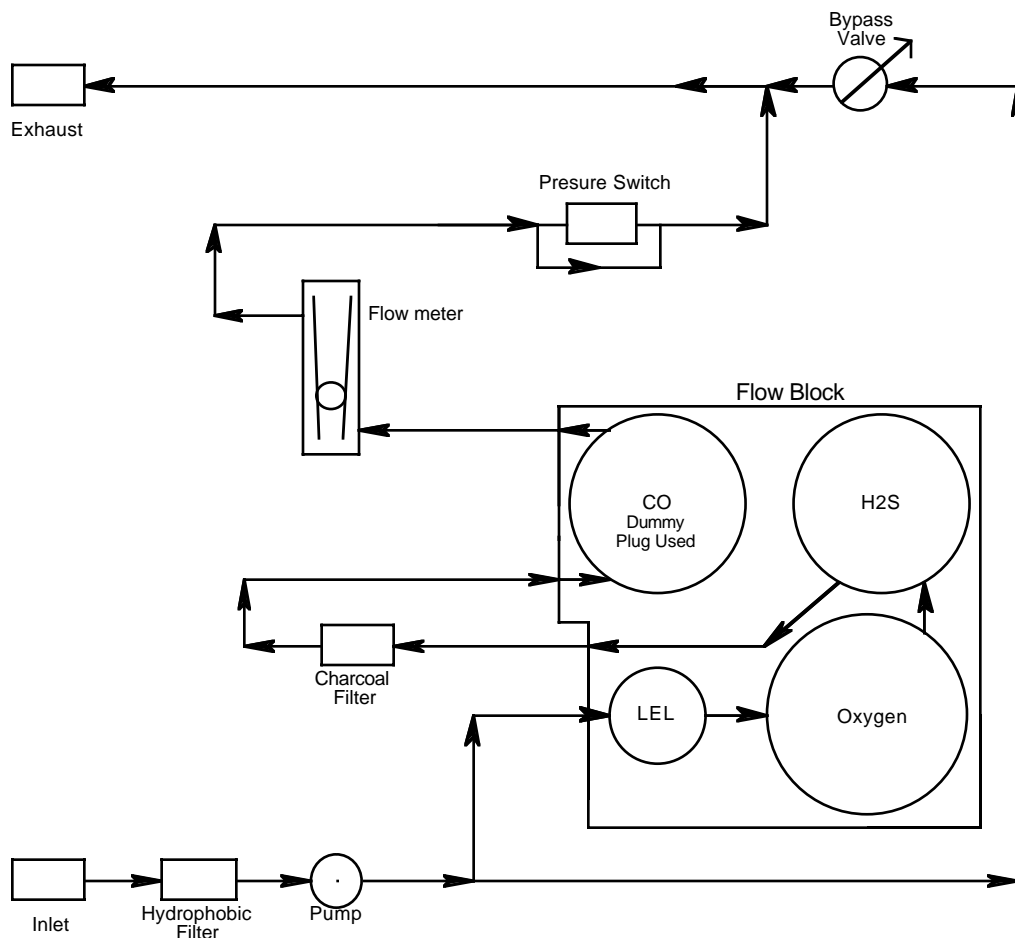


Figure 2: Sample Draw Detector Flow Diagram

INLET fitting

The INLET fitting on the bottom of the housing allows the gas sample to enter the sample draw detector. The INLET fitting accepts 1/4 in. rigid tubing. See the Installation section on page 9 to connect tubing to the INLET fitting.

Hydrophobic Filter

The hydrophobic filter is to the left of the main circuit board. It is held in place by a metal clip. It prevents water and other liquids from contaminating the flow system. Replace the filter when it appears dirty, discolored, or clogged. If a liquid other than water is drawn into the filter, replace the filter as soon as possible.

Charcoal Filter

The charcoal filter is located in the top left corner of the enclosure. It is held in place by a metal clip. The charcoal filter is placed after the H₂S sensor and before the CO sensor (if one is installed) in the flow system. It scrubs out interfering gasses which may cause the CO sensor to respond, such as H₂S or certain hydrocarbons. It is included in this version of the sample draw detector in case a CO sensor is added in the field. If a CO sensor is added in the field, a new charcoal filter should also be installed.

Pump

The pump is located to the left of the main circuit board near the bottom left of the sample draw detector. The pump pulls the gas sample into the sample draw detector. The pump operates on 24 VAC, which is generated from the 24 VDC supplied to the sample draw detector.

Flowmeter

The flowmeter is attached to the main circuit board near the top left corner (see Figure 1.) A ball in the flowmeter column indicates the flow rate of the sample draw detector. The flowmeter measures the flow in the range 0.2 to 2.0 SCFH (Standard Cubic Feet per Hour). Although the sample draw detector will operate down to a flow of 0.6 SCFH, the optimum flow rate is 1.2 SCFH.

Bypass valve

The bypass valve is to the left of the flowmeter. The bypass valve adjusts the flow rate to the sensor. Use a flat-blade screwdriver to adjust the bypass valve.

NOTE: The bypass valve allows fine adjustments of the flow rate. For a wider range of adjustment, use the flow adjust potentiometer (see Figure 1.)

Status lights

Two status lights are above the flowmeter.

Pilot light

The green Pilot light is on when the sample draw detector is receiving power.

Fail light

The red Fail light is on when the sample flow rate is below the low flow level.

NOTE: The factory set low flow level is 0.6 SCFH (± 0.2). See “Adjusting the Low Flow Setting” on page 18 to adjust this setting.

Pressure switch

The pressure switch is mounted to the opposite side of the main circuit board. The pressure switch monitors the flow rate of the incoming gas sample.

If the flow rate falls below the preset low flow level, the pressure switch causes the fail relay to interrupt the signal in the 4-20 mA line for the H₂S and CO channels. This causes a downscale reading at the monitor on these channels. The low flow level is factory-set at 0.6 SCFH (± 0.2 SCFH).

NOTE: There is no low flow indication for the LEL and oxygen channels.

Flow Block

The flow block is located in the lower right corner of the sample draw detector. All the sensors are installed in the flow block. The flow block routes the sampled air to each sensor.

EXHAUST fitting

The EXHAUST fitting on the bottom of the housing allows the gas sample to exit the sample draw detector. The EXHAUST fitting accepts 1/4 in. rigid tubing. See the Installation section on page 9 to connect tubing to the EXHAUST fitting.

Detection System

The detection system consists of the LEL, oxygen and H₂S sensors, preamp circuit board, and the main circuit board.

Combustible Gas Sensor

The combustible gas sensor is installed in the lower left of the flow block. The combustible gas sensor includes the sensing elements, flame arrestor, connector, and sensor leads.

Sensing elements

Two sensing elements are protected within the sensor assembly. Through a series of thermal and electronic reactions, these elements produce an output that is proportional to the detection range of the sample draw detector. The signal from the sensor is sent to a controller.

The porous flame arrestor allows the gas sample to enter the sensor assembly and contact the sensing element. The flame arrestor also contains sparks within the sensor.

Connector

The top of the sensor includes five pins that plug into the socket connector. This connector allows you to replace the sensor without disconnecting the wiring. The sensor leads are soldered to the connector.

Sensor leads

Four color-coded leads extend from the connector. The leads allow you to connect the combustible gas sensor to the main circuit board.

Oxygen sensor

The oxygen sensor is installed in the lower right of the flow block. The oxygen sensor includes the oxygen cell, connector, and sensor leads.

Oxygen cell

The oxygen cell is protected within the sensor assembly. Through a series of chemical and electronic reactions, the cell produces a millivolt output that is proportional to the detection range of the sample draw detector. The signal from the sensor is sent to a controller.

Connector

The cable that extends from the sensor terminates in a socket that plugs into a matching 7-pin male connector. The socket and connector allow you to replace the sensor without disconnecting the wiring. The sensor leads are soldered to the male connector.

Sensor leads

Two color-coded leads extend from the connector. The leads allow you to connect the oxygen sensor to the main circuit board.

CO dummy plug

The CO sensor position in the flow block is occupied by a plastic dummy plug in the 35-3010RK-02.

Hydrogen sulfide gas sensor

The hydrogen sulfide gas sensor is installed in the upper right side of the flow block. It has 4 pins which mate with sockets the preamp circuit board.

Preamp Circuit Board

The preamp circuit is used to connect the CO and H₂S sensors to the main circuit board and to secure the sensors in the flow block. Two cables mate to the main circuit board: the one on the left is for the CO sensor signal and the one on the right is for the H₂S sensor signal. Since the CO sensor is replaced with a dummy plug in the 35-3010RK-02 the CO sensor signal cable carries no signal in this version of the 35-3010RK.

Main Circuit Board

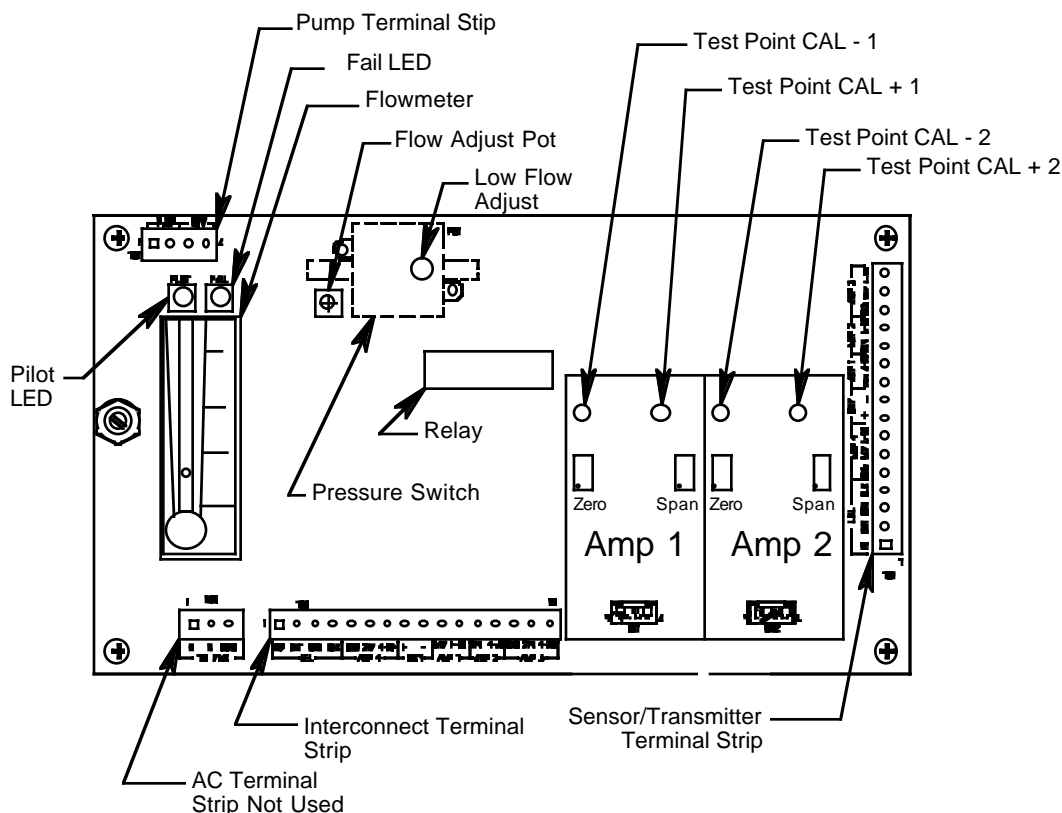


Figure 3: Main Circuit Board

The main circuit board includes the interconnect terminal strip, sensor/transmitter terminal strip, amp 1 circuit, amp 2 circuit, pump terminal strip, and relay (see Figure 3).

NOTE: The flowmeter and status lights are mounted to the main circuit board but are considered part of the flow system.

Interconnect terminal strip

The interconnect terminal strip is the sixteen-point terminal strip near the bottom edge of the main circuit board. Use the interconnect terminal strip to connect the sample draw detector to controller.

Sensor/Transmitter terminal strip

The sensor/transmitter terminal strip is the sixteen-point terminal strip near the right edge of the circuit board. Use the sensor/transmitter terminal strip to connect sensors or transmitters to the main circuit board.

NOTE: The sensors are factory wired to the sensor/transmitter terminal strip. See “Installation” on page 9 for all wiring procedures related to the sample draw detector.

Amp 1 and Amp 2 circuits

These circuits are located to the left of the sensor/transmitter terminal strip. They each include test points, a zero pot, and a span pot. Amp 1 is on the left and is for the CO channel. Amp 2 is on the right and is for the H₂S channel.

The zero and span pots are used during calibration. Use the span pot to make adjustments to gas response readings and the zero pot to make adjustments to the zero reading

The test points are labeled **CAL-1 and CAL+1** for the CO channel and **CAL-2 and CAL+2** for the H₂S channel. A 100 mV - 500 mV output is available at the H₂S test points for use during calibration. No output is available at the CO test points.

Pump terminal strip

The pump terminal strip is the four-point terminal in the top left corner of the circuit board. Use the pump terminal strip to connect the pump and pressure switch to the main circuit board.

NOTE: The pump and pressure switch are factory-wired to the circuit board. See “Installation” on page 9 for all wiring procedures related to the sample draw detector.

Relay

The relay is approximately in the middle of the circuit board. The relay is a four pole, double-throw (4PDT) relay and is rated for 2 amps at 25 VDC (resistive). If the pressure switch senses a low flow condition, the relay interrupts the signal from all three channels which will cause the display at the controller to indicate a fail condition for each channel.

Installation

This section describes procedures to mount the sample draw gas detector in the monitoring environment and wire the sample draw detector to a controller.

Mounting the Sample Draw Combustible Gas Detector

1. Select the mounting site. Consider the following when you select the mounting site.
 - Is there enough room to open the housing door and make wiring connections at the bottom of the housing and tubing connections at the right of the housing?

Make sure there is sufficient room to perform start-up, maintenance, and calibration procedures.

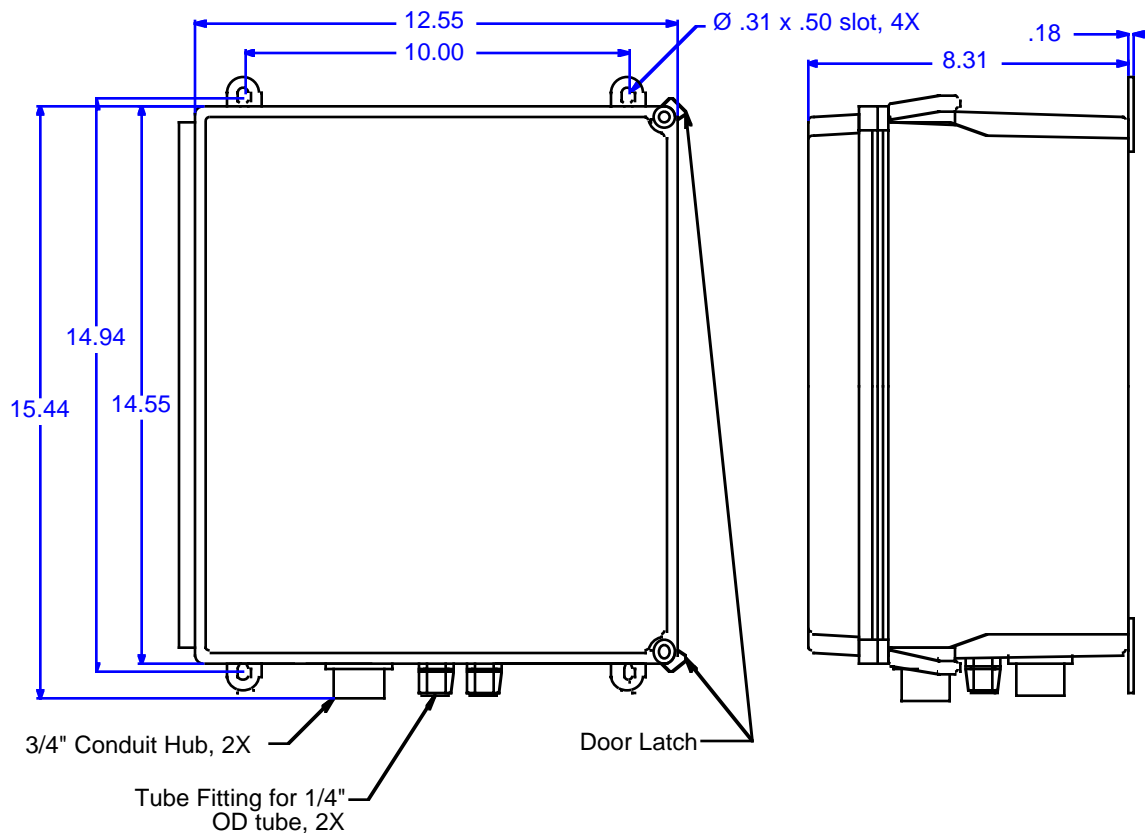


Figure 4: Mounting the sample draw Detector

2. Close and latch the housing door.

NOTE: The sample draw detector is shipped with the mounting feet “tucked under” the housing to protect the mounting feet during shipment.

3. Slightly loosen the screw that secures one of the mounting feet to the housing, then rotate the mounting foot 180 degrees (see Figure 4).
4. Tighten the screw that secures the mounting foot to the housing.
5. Repeat steps 3 and 4 for the remaining three mounting feet.

6. Position the sample draw housing on a vertical surface at eye level (4 1/2 to 5 feet from the floor).
7. Insert 1/4 in. or 5/16 screws through the slots in the mounting feet to secure the housing to the mounting surface.

Connecting the Sample Lines to the sample draw Detector

1. Attach 1/4 in. O.D. rigid polypropylene or rigid Teflon sample tubing to the INLET fitting.

CAUTION: *If you use **flexible** sample tubing (polyurethane is acceptable), use an appropriate insert to seal the connection between the tubing and the INLET fitting.*

2. Place the opposite end of the tubing at the sampling area.

CAUTION: *Avoid loops or slumps in the incoming sample line. To reduce response time, keep the incoming sample line as short as possible.*

3. Attach rigid sample tubing to the EXHAUST fitting.
4. Route the opposite end of the tubing to an open area where the sample can safely disperse.

Wiring the sample draw Detector

WARNING: *Always verify that the power source is OFF before you make wiring connections.*

1. Turn off the controller.
2. Turn off or unplug incoming power to the controller.
3. Unlatch and open the housing door of the sample draw detector.
4. Guide a eight-conductor 18 gauge, shielded cable or eight 18 gauge wires in conduit through one of the conduit hubs at the bottom of the sample draw housing. If necessary, use both hubs to bring the wires in making sure that all the wires for a particular channel go through the same hub.
5. Connect the cable to the sample draw detector's interconnect terminal strip as shown in Figure 4.
6. Close and latch the housing door of the sample draw detector.

CAUTION: *Leave the cable shield drain wire insulated and disconnected at the sample draw detector. You will connect the opposite end of the drain wire at the device.*

7. Route the cable or wires in conduit leading from the sample draw detector to the controller.
8. Connect the drain wire to an available chassis ground at the controller end.

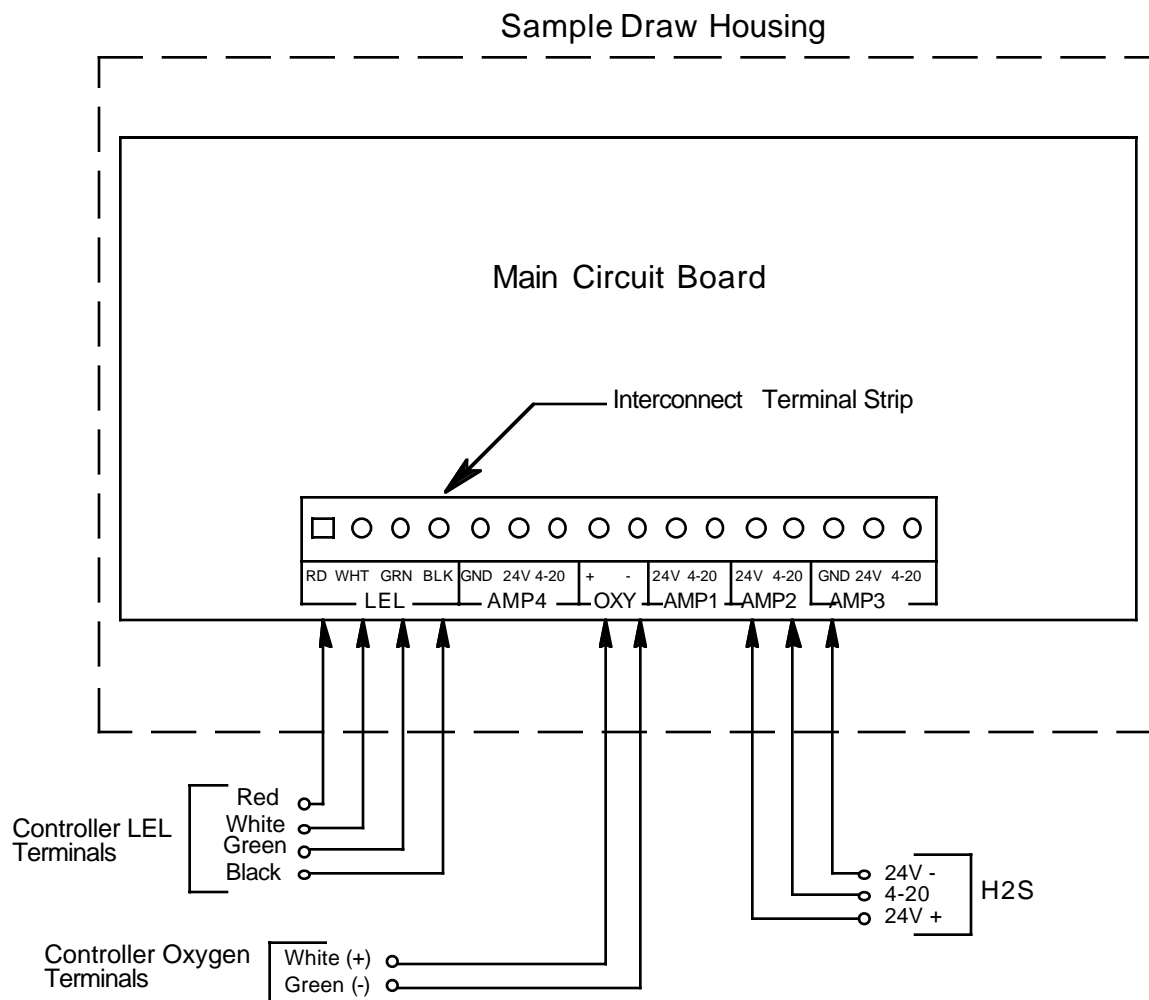


Figure 5: External (field) Wiring, Sample Draw Detector

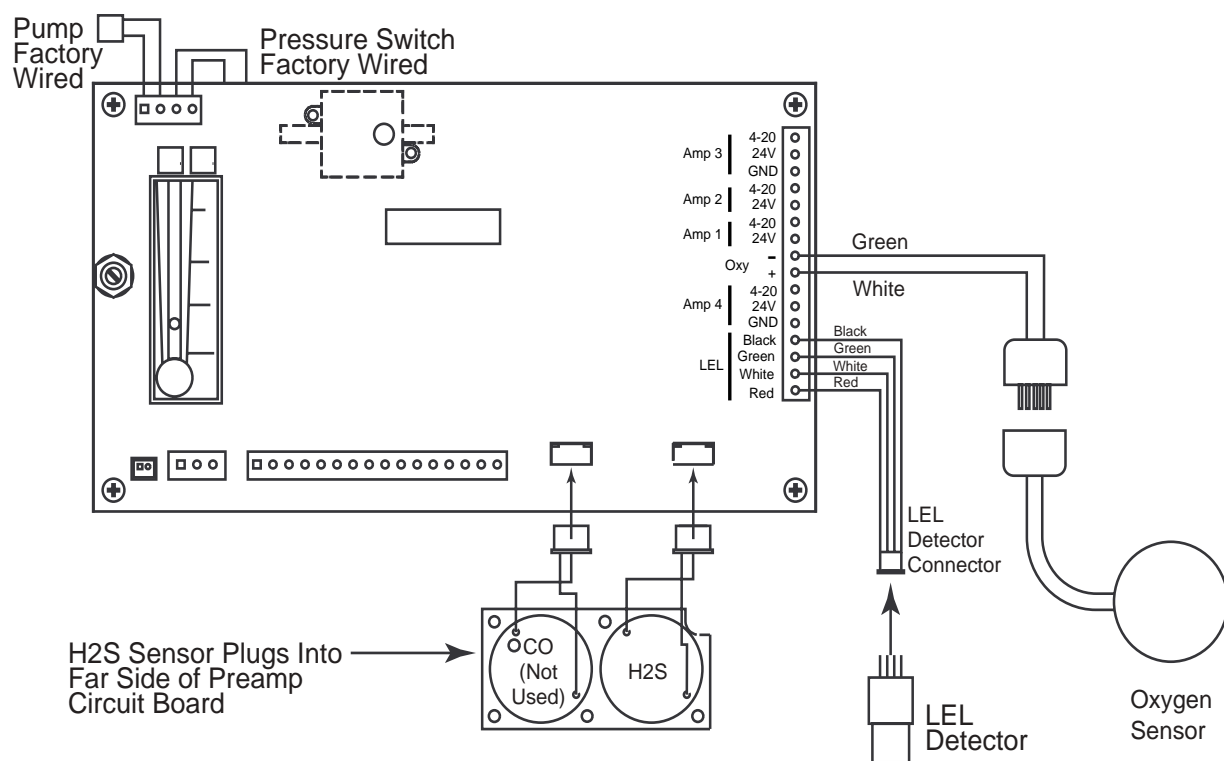


Figure 6: Internal (factory) Wiring, Sample Draw Detector

Start Up

This section describes procedures to start up the sample draw detector and place the sample draw detector into normal operation.

Introducing Incoming Power

1. Complete the installation procedures described earlier in this manual.
2. Verify that the power wiring to the controller is correct and secure. See the controller instruction manual.
3. Turn on or plug in the incoming power at the controller, then turn on the controller.
4. Verify that the controller is on and operating properly.
5. Verify that the Pilot light is on at the sample draw detector.
6. Verify that the flowmeter indicates a flow rate of approximately 1.2 SCFH. If necessary, use the bypass valve or flow adjust potentiometer to adjust the flow rate.

NOTE: The following step tests for leaks in the sample line. This test may cause a low flow condition at the sample draw detector.

7. Verify that the incoming sample line is not leaking. To test the sample line, plug the open end of the sample line with your thumb. If the flowmeter ball drops to the bottom of the flowmeter, the incoming sample line is not leaking.
8. Remove your thumb from the sample line, verify the flowmeter returns to a normal flow rate.

Setting the Zero Reading

CAUTION: *If you suspect the presence of combustible gas, toxic gases, or an abnormal oxygen condition (not 20.9%) in the monitoring environment, use the calibration kit and the zero air calibration cylinder to introduce "fresh air" to the sample draw adapter and verify an accurate zero setting.*

1. Verify that the sample draw detector is sampling a fresh air environment (environment known to be free of combustible gas or toxic gasses and of normal oxygen content, 20.9%).
2. Open the housing door.
3. Set a voltmeter to measure in the millivolt (mV) range.
4. Check the zero reading for the H₂S channel.
 - Plug the voltmeter into the test points in the AMP 2 section of the main circuit board. Plug the positive lead into the test point labeled **CAL+2**; plug the negative lead into the test point labeled **CAL-2**.
 - Verify a voltmeter reading of 100 mV (± 2 mV).
 - If necessary, use a small flat-blade screwdriver to adjust the zero pot until the voltmeter reading is 100 mV (± 2 mV).
5. Verify a reading of 0% LEL at the controller.

If the display reading is 0% LEL, the combustible detector is in normal operation.

If the display reading is not 0% LEL, perform a zeroing operation at the controller. See

the controller instruction manual for directions.

6. Verify a reading of 20.9% oxygen at the controller.

If the display reading is 20.9% oxygen the oxygen detector is in normal operation.

If the display reading is not 20.9% oxygen, perform a fresh air adjustment operation at the controller. See the controller instruction manual for directions.

7. Remove the voltmeter from the test points.
8. Close the housing door.

Maintenance

This section describes maintenance procedures. It includes preventive maintenance procedures. This section also includes procedures to troubleshoot the sample draw detector, replace components of the sample draw detector, and adjust the low flow setting.

Preventive Maintenance

This section describes a preventive maintenance schedule to ensure the optimum performance of the sample draw detector. It includes daily, monthly, and quarterly procedures.

Daily

1. Verify that the pilot light is on.
2. Verify that the flowmeter indicates a flow rate of approximately 1.2 SCFH.
If necessary use the bypass valve or flow adjust potentiometer to adjust the flow rate to 1.2 SCFH.
3. Verify a reading of 0%LEL for the combustible channel, 20.9% for the oxygen channel, and 0 ppm for the H₂S channel (100 mV at the amp 2 test points). Investigate significant changes in the reading.

Monthly

This procedure describes a test to verify that the sample draw detector responds properly to the target gases.

Preparing for the response test

CAUTION: *This procedure may cause alarms at the monitoring device. Take appropriate action to avoid this, such as entering the calibration mode at the monitoring device.*

1. Verify that the monitoring device is reading 0 for the combustible and H₂S channels and 20.9 for the oxygen channel.

If the reading is not 0 on any of the channels, set the zero reading as described in the "Start Up" section on page 13, then continue this procedure.
2. Assemble the calibration kit as described in the Calibration section of this manual.
Use of a 4-gas cylinder is recommended so that all channels may be checked at once.

Performing the response test

NOTE: This procedure describes the RKI calibration kit that includes a gas collection bag. A calibration kit that uses a demand flow regulator is also available.

1. Connect the calibration tubing from the gas collection bag to the inlet line at or near the INLET fitting.

The sample draw detector's pump automatically begins pulling the test sample from the gas collection bag when you connect the tubing to the inlet line.
2. After approximately one minute, verify that the reading for each channel at the monitoring device stabilizes within $\pm 10\%$ of the concentration of the test sample. If the reading is not within $\pm 10\%$ of the test sample, calibrate the sample draw detector

as described in the Calibration section of this manual.

3. Remove the calibration tubing from the inlet line, then reconnect the inlet line.

Quarterly

Calibrate the sample draw detector as described in the “Calibration” section on page 19.

Troubleshooting

The troubleshooting guide describes symptoms, probable causes, and recommended action for problems you may encounter with the sample draw detector.

NOTE: This troubleshooting guide describes sample draw detector problems only. See the instruction manual for the controller if it exhibits any problems.

Fail condition

Symptoms

- The sample draw detector's Fail light is on.
- The monitoring device is operating properly but indicates a reading well below zero on one or more channels.

Probable causes

- The sample draw detector's flow rate is too low because of an obstructed sample line, failed pump, etc.
- The sample draw detector is malfunctioning.
- The sensor or transmitter wiring is disconnected or misconnected.

Recommended action

1. At the sample draw detector, set the correct flow rate with the bypass valve or flow adjust potentiometer.
2. If you cannot set the correct flow rate, check the sample lines for obstructions or kinks.
3. Verify that the sensor wiring is correct and secure. The Installation section on page 9 describes detector wiring connections.
4. Calibrate the problem channel or channels as described in the Calibration section on page 19.
5. If the fail condition continues, replace the sensor from the problem channel or channels as described later in this section.
6. If the fail condition continues, contact RKI Instruments, Inc., for further instruction.

Slow or no response/difficult or unable to calibrate

Symptoms

- One or more of the sensors respond slowly or do not respond during the monthly response test.
- Unable to accurately set the zero or response reading on one or more of the channels during the calibration procedure.
- One or more of the sensors requires frequent calibration.

NOTE: Under “normal” circumstances, the sample draw detector requires calibration

once a quarter. Some applications may require a more frequent calibration schedule.

Probable causes

- The calibration cylinder is low, out-dated, or defective.
- The sample draw detector's flow rate is too low because of an obstructed sample line, failed pump, etc.
- The sample draw detector is malfunctioning.

Recommended action

1. Verify that the calibration cylinder contains an adequate supply of a fresh test sample.
2. If necessary, set the correct flow rate with the bypass valve or flow adjust potentiometer.
3. If you cannot set the correct flow rate, check the sample line for obstructions or kinks.
4. If the calibration/response difficulties continue, replace the sensor as described later in this section.
5. If the calibration/response difficulties continue, contact RKI Instruments, Inc., for further instruction.

Replacing Components of the Sample Draw Detector

This section includes procedures to replace the sensor, filter, and ferrules.

Replacing the combustible sensor

1. Turn off incoming power.
2. Open the housing door of the sample draw detector.
3. Unscrew and remove the two screws that secure the retraining plate, then lift the plate, connector, and sensor out of the housing.
4. Unplug the connector from the sensor.
5. Verify that you are using the correct replacement sensor (NC-6240 is printed on the sensor), then plug the sensor into the connector.
6. Place the sensor in the combustible gas sensor cavity, then position the retaining plate on the two standoffs.
7. Secure the retaining plate to the standoffs with the two screws you removed in step 3.
8. Turn on incoming power.
9. Calibrate the replacement sensor as described in the "Calibration" section on page 19.

Replacing the oxygen sensor

1. Turn off incoming power.
2. Open the housing door of the sample draw detector.
3. Unscrew and remove the two screws that secure the retraining plate, then lift the plate, connector, and sensor out of the housing.
4. Unplug the connector from the socket that leads from the sensor.
5. Plug the socket of the replacement sensor into the connector.

6. Place the sensor in the oxygen sensor cavity, then position the retaining plate on the two standoffs.
7. Secure the retaining plate to the standoffs with the two screws you removed in step 3.
8. Turn on incoming power.
9. Calibrate the replacement sensor as described in the “Calibration” section on page 19.

Replacing the hydrogen sulfide sensor

1. Turn off incoming power.
2. Open the housing door of the sample draw detector.
3. Unscrew the 5 screws that retain the preamp circuit board.
4. Lift the preamp circuit board away from the flow block.
Be careful not to pull on the cables that connect the preamp circuit to the to the main circuit board.
There is a foam gasket in the bottom of each flow cavity beneath the circuit board. Make sure the gaskets stay in place.
5. Pull the H₂S sensor off the preamp circuit board. It is located in the amp 2 position (right side) of the preamp circuit board.
6. Plug the new sensor into the preamp board.
7. Reinstall the preamp circuit board with the sensors onto the flow block.
8. Turn on incoming power.
9. Calibrate the replacement sensor as described in the “Calibration” section on page 19.

Adjusting the Low Flow Setting

The factory-set low flow setting is 0.6 SCFH (± 0.2). To adjust the low flow setting:

1. Use the flow adjust potentiometer (VR1) to set the flow to 0.6 SCFH.
If the sample draw detector goes into low flow alarm before you can adjust the flow down to 0.6 SCFH, adjust the low flow potentiometer 1/4 turn clockwise, then attempt to set the flow again. Repeat this step until you are able to adjust the flow to 0.6 SCFH.
2. Slowly turn the low flow potentiometer counterclockwise just until the sample draw detector goes into low flow alarm.

NOTE: The low flow potentiometer is accessible through a circular cutout in the main circuit board. The cutout is labeled PS1.

3. Verify that the low flow alarm is 0.6 SCFH (± 0.2). Repeat steps 3 and 4 if necessary.
4. Use the flow adjust potentiometer (VR1) to set the flow to 1.2 SCFH.
5. Make sure the sample draw detector's Fail light is off.

Calibration

This section describes how to calibrate the sample draw detector. It includes procedures to assemble the calibration kit, set the zero reading for each channel, set the response reading for each channel, and return to normal operation.

NOTE: This procedure describes calibration using a gas collection bag and a 4-gas calibration cylinder. A demand-flow regulator calibration kit is also available for calibrating the sample draw detector.

Preparing for Calibration

CAUTION: *Although calibration of the H₂S channel does not require that you enter the controller's calibration mode, if you are only calibrating the H₂S channel, it is recommended to enter the controller's calibration mode to avoid unwanted alarms.*

6. Place the controller into its calibration program or disable external alarms.
1. Open the housing door.
2. Set a voltmeter to measure in the millivolt (mV) range. It will be used in the calibration of the H₂S channel
3. When checking the mV output of the H₂S channel, plug the voltmeter leads into the test points in the AMP 2 section of the main circuit board. Plug the positive lead into the test point labeled **CAL+2**; plug the negative lead into the test point labeled **CAL-2**.
4. Use the following formula to determine the correct test points output for the H₂S calibrating sample.

$$\text{Output (mV)} = (\text{calibrating sample/fullscale}) \times 400 + 100$$

For example, with a calibrating sample of 25 ppm hydrogen sulfide and a fullscale setting of 100 ppm hydrogen, the correct output for the H₂S test points is 200 mV.

$$200 \text{ (mV)} = (25/100) \times 400 + 100$$

Assembling the Calibration Kit

NOTE: If you can verify a fresh air environment, it is not necessary to use a zero air calibration cylinder to set the zero reading. Go to the next section, "Setting the Zero Reading."

1. Connect the calibration kit sample tubing to the fitting on the gas collection bag.
2. Connect the sample tubing from the gas collection bag to the inlet line at or near the INLET fitting.
Allow the sample draw pump to draw out any residual gas in the gas collection bag.
3. Disconnect the calibration kit sample tubing from the inlet line.
4. Close the clamp right away. The clamp is attached to the calibration kit sample tubing.
5. Connect the tubing from the gas collection bag to the fixed flow regulator, then open the clamp.

6. Screw the fixed flow regulator onto the zero air calibration cylinder. The gas collection bag begins to fill.
7. When the bag is full, unscrew the fixed flow regulator from the cylinder.
8. Close the clamp, then disconnect the sample tubing from the fixed flow regulator.

Setting the Zero Readings

1. Open the clamp, then connect the sample tubing from the gas collection bag to the sample draw detector's inlet line. **This step is not necessary if you verified a fresh air environment earlier in this procedure.**
2. Allow the reading to stabilize for approximately 1 minute.
3. Verify a voltmeter reading of $100\text{ mV} \pm 2\text{ mV}$ at the AMP 2 test points for the H₂S channel as described in the Preparing for Calibration section above.
4. If necessary, use a small flat-blade screwdriver to adjust the zero pot for the H₂S channel until the voltmeter reading is $100\text{ mV} \pm 2\text{ mV}$.
5. The zero (fresh air) readings for the LEL and oxygen channels are set at the controller. See the controller operator's manual for instructions to set the zero readings.
6. Allow the sample draw pump to draw out any residual gas in the gas collection bag. **Step 6 is not necessary if you verified a fresh air environment earlier in this procedure.**
7. Disconnect the sample tubing from the inlet line, then close the clamp.
8. Connect the sample tubing from the gas collection bag to the fixed flow regulator, then open the clamp.
9. Screw the fixed flow regulator onto the calibration gas cylinder. The gas collection bag begins to fill.
10. Unscrew the fixed flow regulator from the cylinder when the gas collection bag appears full.
11. Close the clamp, then disconnect the sample tubing from the fixed flow regulator.

Setting the Response Reading

1. Open the clamp, then connect the sample tubing from the gas collection bag to the inlet line at or near the sample draw detector's INLET fitting.
2. Allow the sample draw detector to respond to the calibrating sample for approximately 1 minute.
3. After one minute, check the mV output on the AMP 2 test points for H₂S and verify that the reading matches the response reading ($\pm 2\text{ mV}$) you determined earlier.
4. If necessary, use the AMP 2 span pot to adjust the reading to match the correct response reading.
5. Remove the voltmeter leads from the test points.
6. Follow the directions in the controller's instruction manual for setting the response reading. Note that if you use a 4-gas mix, the response reading for oxygen will be set using something other than 0% oxygen, typically 12.0% oxygen.
7. Allow the sample draw pump to draw out any residual gas in the gas collection bag.
8. Disconnect the sample tubing from the sample draw detector's inlet line, then close the clamp.

9. Reconnect the incoming sample line.
10. Wait 1 to 2 minutes to allow the calibration gas to be drawn out and the readings to stabilize.
11. Store the components of the calibration kit in a safe and convenient place.

Parts List

Table 4 lists replacement parts and accessories for the sample draw gas detector.

Table 2: Parts List

Part Number	Description
06-1248RK	Sample tubing, 3/16 x 5/16, specify length, (for calibration kit)
07-0034RK	Sealing gasket for H ₂ S flow block cavity
30-0610RK	Pump
33-0171RK	Hydrophobic filter (AcroPak)
33-6095RK	Charcoal filter, CF-188
61-0145RK	Combustible sensor
65-0601RK	Oxygen sensor
81-0154RK-02	4-gas calibration gas cylinder, 50% LEL methane/12% oxygen/25 ppm H ₂ S/50 ppm CO, 58 liters
81-0076RK-03	Zero air calibration cylinder (103 liter)
81-1005RK	Regulator, fixed flow, 6 LPM
81-1126RK	Gas collection bag (2 liter)
ES-1537-H2S	H ₂ S sensor